 


FP48987 MUK Rev 3

morphy richards®

Accents Hand Blender

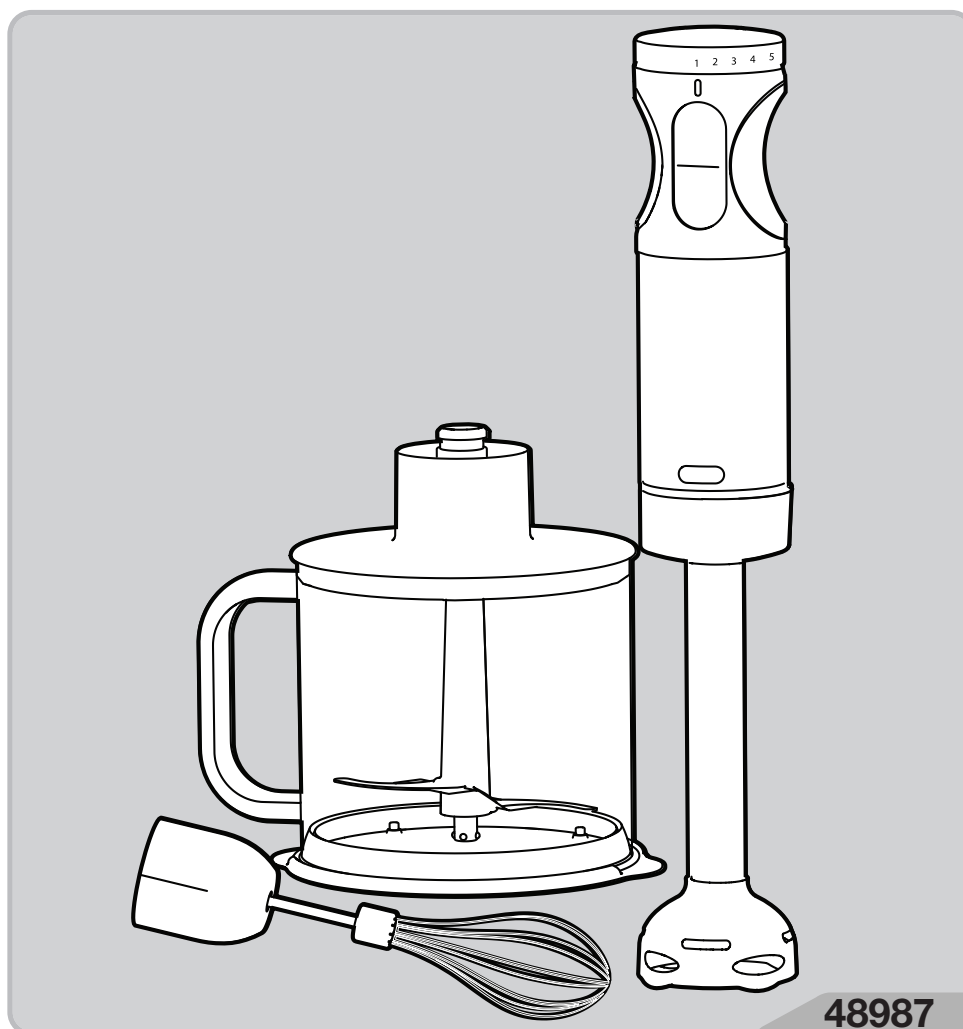

For competitions, product hints and tips
and more join us at



www.homeofthehouseproud.com



www.facebook.com/morphyrichardsuk

 


www.twitter.com/loveyourmorphy

www.morphyrichards.com

* Register online for your 5 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)


Product overview

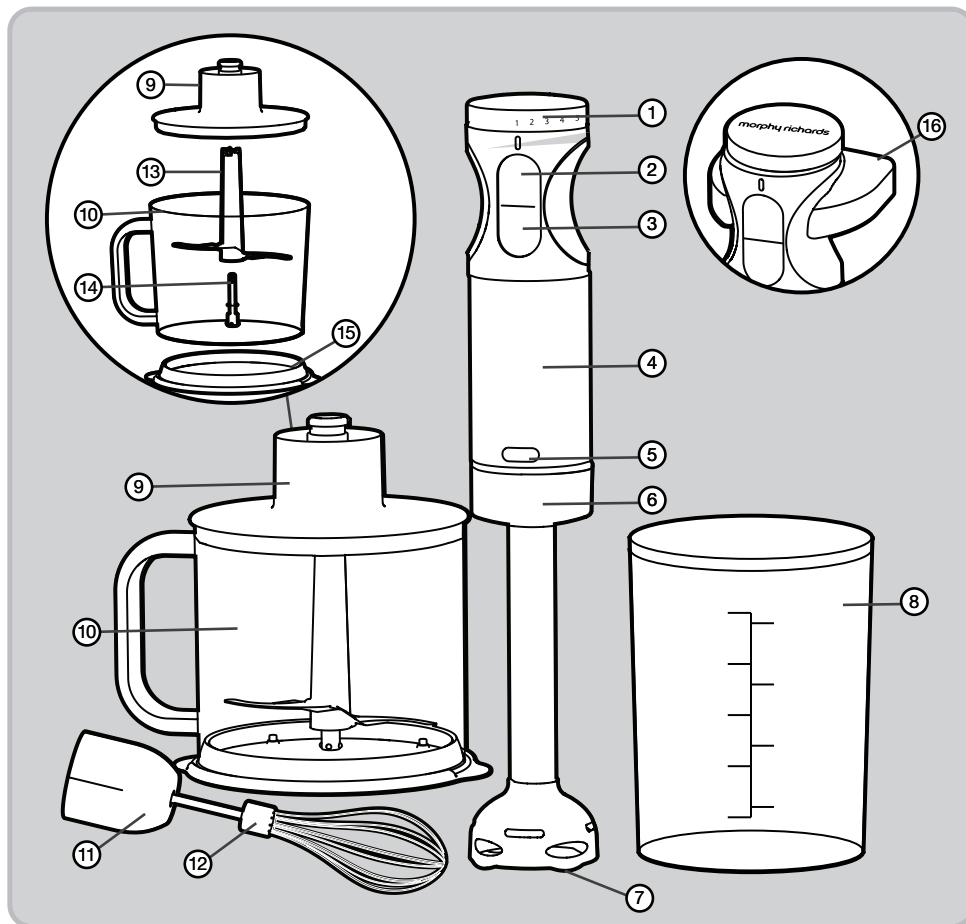


Features

- | | |
|-----------------------|--|
| (1) Speed Control | (10) Chopping Bowl |
| (2) On Button | (11) Whisk Gearbox |
| (3) Turbo Button | (12) Balloon Whisk |
| (4) Main Unit | (13) Chopping Blade |
| (5) Release Button | (14) Spindle |
| (6) Blending Leg | (15) Chopping Bowl Slip Mat / Measuring Beaker Lid |
| (7) Blending Blade | (16) Wall Bracket |
| (8) Measuring Beaker | |
| (9) Chopping Bowl Lid | |


 
Using your Accents Hand Blender

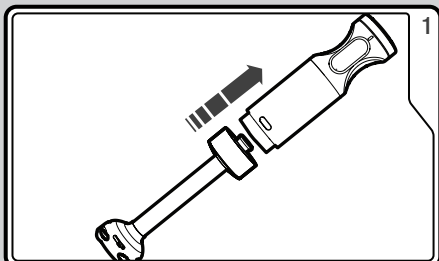


 
Insert the Blending Leg (6) into the Main Unit (4) and click into place.

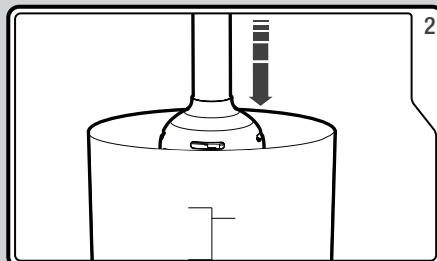

  Place leg into food to be blended. **DO NOT** blend in Chopping Bowl (10). Use the Measuring Beaker (8).

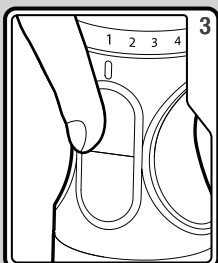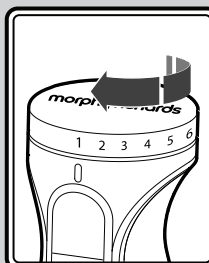

  Select the speed on the Speed Control (1) and press and hold the On Button (2) to start. Release the button to stop **BEFORE** removing the Blending Leg from the food.

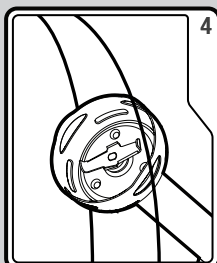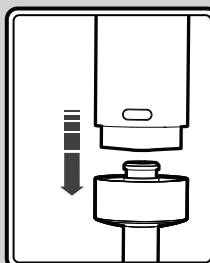

Press the Release Button (5) and gently pull the Blending Leg to remove. Rinse the Blending Leg in running water.

Before first use

- **WARNING:** Carefully unpack your Accents Hand Blender as the blades are very sharp.
- Wash all parts before first use, except for the blender body, see the 'Cleaning' section on page 5 for instructions.

 
Usage

- **WARNING:** Your Accents Hand Blender is designed for intermittent use. Do not use non-stop for more than 1 minute. Allow to cool down for a minimum of 5 minutes before further use.


Crushing Ice

- The Blender Leg (6) is fitted with a special blade suitable for crushing ice. It can be used to crush ice cubes to produce fine ice for cocktails, cold drinks etc.
- 1 Place a maximum of 4 ice cubes in the Measuring Beaker (8).
 - 2 Press firmly down on the ice cubes with the blender, using a plunging action until the ice cubes are fine ice pieces.
- **DO NOT** crush ice in the Chopping Bowl (10) as it will damage the blades.


Using your Accents Hand Blender with Chopping Bowl

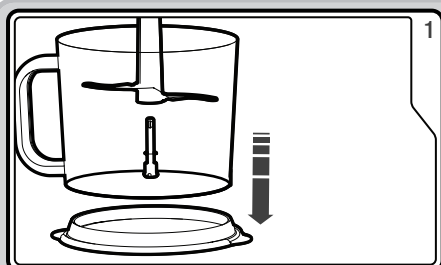

 
Fit the Chopping Bowl (10) onto the Base (16) and insert the Blade (13) onto the Spindle (14).

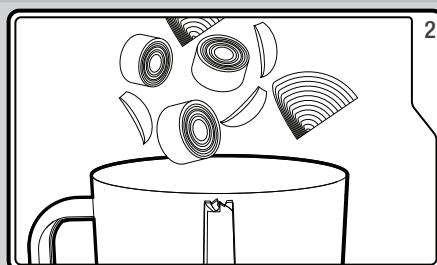

 
Add the food to the Chopping Bowl. Do not exceed the amounts listed on page 6.

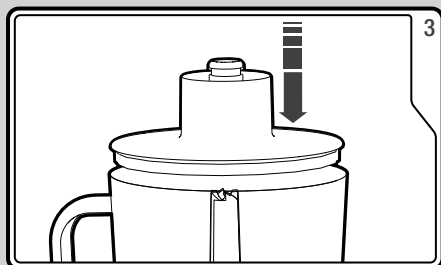

 
Place the Chopping Bowl Lid (9) onto the Chopping Bowl. Ensure it is placed correctly onto the Chopping Blade.

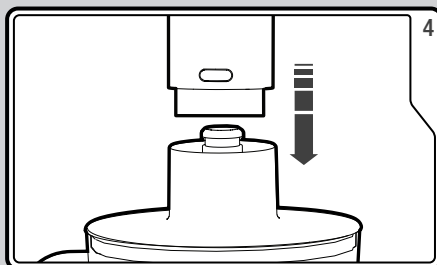

 
Place the Main Unit (4) onto the Chopping Bowl Lid until it clicks into place.

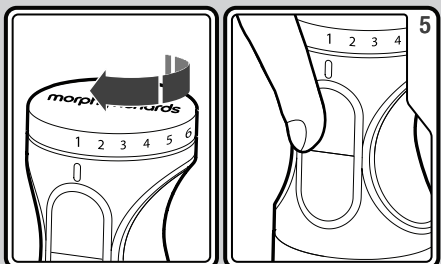

 
Select the speed on the Speed Control (1) and press and hold the On Button (2) to start. Hold the Chopping Bowl down firmly while in use.

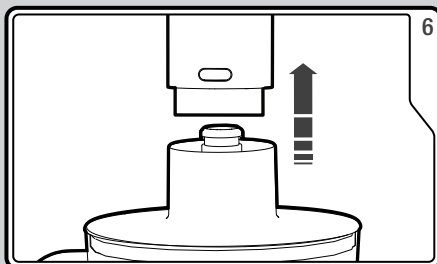

 Press the Release Button (5) to remove the Main Unit from the Chopping Bowl.

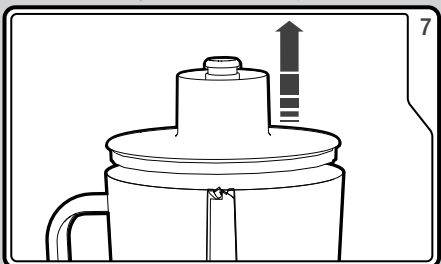

Remove the Chopping Bowl Lid.

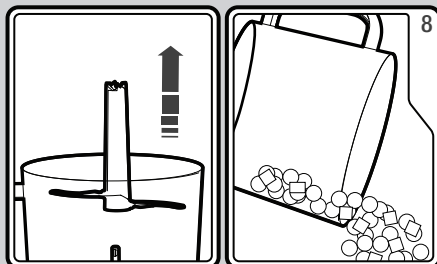 

Remove the Chopping Blade from the bowl before removing food.

Turbo Button

- The Accents Hand Blender has 8 different speeds as well as a Turbo Button (3).

Press the Turbo Button to run the Accents Hand Blender on speed 8 for intermittent bursts.

Using the Whisk Attachment

- 1 Insert the Balloon Whisk (12) into the Whisk Gearbox (11).
 - 2 Place the assembled Whisk onto the Main Unit (4), by aligning the release button indent on the Whisk Gearbox with the Main Unit push until it has clicked into place.
- To avoid splashing, start the whisking on speed 1 and increase to speed 3 if required.
Do not use the turbo setting.

Notes

- Your Accents Hand Blender is not suitable for grinding coffee beans.
- When chopping meat, ensure that all the bones have been removed before adding to the Chopping Bowl.

Top tips

- When blending foods with strong colour (eg. carrots), the plastic parts of the appliance may become discoloured. Wipe with cooking oil to clean any discoloured parts.
- For blending and chopping, select a slow speed for soft ingredients, increase the speed to produce the consistency required.
- Select a high speed for chopping or blending hard ingredients.
- When using the Blending Leg (6), start the process by plunging the blender into the ingredients. This will ensure all the ingredients are pulled into the blade to be processed. Continue this movement until the mixture is to the desired consistency.
- Do not lift the Blending Leg out of the mixture completely when running, as splashing may occur.
- The Chopping Bowl (10) is not suitable for grinding coffee beans.

Care and cleaning

- **WARNING:** Always unplug the appliance from the mains socket before cleaning and maintenance.

WARNING: Handle the blades with care as they are sharp.

The Whisk Gearbox (11) and Chopping Bowl Lid (9) should be wiped over with a warm soapy cloth. Do not immerse these parts in water.

Clean the Main Unit (4) with a damp cloth and dry all the parts thoroughly.

WARNING: Never immerse the Main Unit in water or any other liquid.

Wall mounting

- The Accents Hand Blender can be wall mounted for convenient storage.

WARNING: Always ensure you are not drilling into the wall adjacent to any electrical wires or pipes, such as water or gas.

Do not mount the Wall Bracket (16) over or near any portion of a heating or cooking appliance or sink or basin.

- 1 Find a suitable position on the wall or cupboard where the Accents Hand Blender is to be positioned.
- 2 Mark the fixing points through the Wall Bracket.
- 3 If you are fixing to a solid brick or block wall, use a 6mm masonry drill and drill to a depth of 25mm.
- 4 If fixing to a wood or cupboard surface, drill a 2mm pilot hole or use a bradawl.

Chopping Bowl capacity

Guidelines are provided below. These may vary according to the quantity and the consistency of the food. Do not process for more than 1 minute at a time.

Food	Capacity	Preparation	Approx Time
• Beef	• 400g	• Dice approx 2cm	• 20-30 seconds
• Pork	• 400g	• Dice approx 2cm	• 20-30 seconds
• Hard cheese	• 250g	• Dice approx 1cm	• 30-40 seconds
• Almonds	• 300g	• None	• 10-20 seconds
• Hard boiled eggs	• 3	• Cut into halves	• 3-5 seconds
• Onion	• 250g	• Cut into quarters	• 3-6 seconds
• Parsley	• Large bunch	• Remove stalks	• 3-5 seconds
• Carrots	• 400g	• Slice	• 5-10 seconds
• Dry bread	• 2 slices	• Cut into quarters	• 10-20 seconds

Troubleshooting

Problem	Reason	Solution
• The Accents Hand Blender is not working.	• The hand blender is not switched on.	• Check the mains outlet and the mains outlet.
• The Accents Hand Blender is not working.	• The attachment is not correctly installed.	• Release the Attachment from the Main Unit and re-attach.
• The Accents Hand Blender is overheating.	• The hand blender has been used for too long continuously	• Allow to cool before using again.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0844 871 0960

IRE Helpline: 1800 409 119

Spares: 0844 873 0726

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: www.homeofthehouseproud.com

Facebook: www.facebook.com/morphyrichardsuk

Twitter: www.twitter.com/loveyourmorphy

Website: www.morphyrichards.com

Health and Safety

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as:
farm houses;
by clients in hotels, motels and other residential type environments;
bed and breakfast type environments.
It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place the bowl used with the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface, such as a hot plate or radiant rings or near a naked flame.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- The power cord cannot be replaced. Contact Morphy Richards for advice.

Personal safety

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the hand mixer attachment blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING:** To protect against the risk of electric shock, NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for anything other than it's intended purpose.
- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.

Product specific safety

- **WARNING:** The blender blades are very sharp. Handle with care when using and cleaning.
- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug or mixer in water or other liquid.
- Do not clean the attachments under running water while they are in position.
- Make sure the blender is switched off before connecting to or disconnecting from the mains supply and when left unattended.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 3 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

FP48987 MUK Rev 3 09/11

Registering your 5 year guarantee

Your standard one year guarantee is extended for an additional 36 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 year. To validate your 5 year guarantee register with us online at www.morphyrichards.co.uk

Or call our customer registration line

UK 0844 871 0962

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 5 year guarantee is only available in the UK and Ireland. Please refer to the 2 year guarantee for more information.

Your 2 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion
 - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
 - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS, CALL
OUR HELPLINE:**

**UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726**

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119
www.morphyrichards.com

